

### Display Firmware Terminal Log

`/opt/MegaRAID/MegaCli/MegaCli64 -fwtermlog -dsply -a0 | more`

<code>./MegaCli64 -FwTermLog -Dsply -aALL &gt; /tmp/ttylog.txt/</code>	Creates the RAID controller log (ttylog)
<code>./MegaCli64 -PDList -aALL &gt; /tmp/disks.txt</code>	Creates a list with information about the RAID controllers, virtual disks and hard disks installed
<code>./MegaCli64 -LDInfo -LALL -aALL &gt; /tmp/LDinfo.txt</code>	Creates a list with information about existing RAID volumes and configurations
<code>./MegaCli64 -AdpAllInfo -aALL &gt; /tmp/Adapterinfo.txt</code>	Creates a list with information about RAID controller settings
<code>./MegaCli64 -AdpBbuCmd -aALL &gt; /tmp/Battery.txt</code>	Creates a detailed list of the battery status of the RAID controller (state of charge, learning cycle, etc.)
<code>./MegaCli64 -AdpEventLog - IncludeDeleted -f deleted.txt -aALL</code>	Creates the RAID controller log (ttylog) with all information since very first controller initialization (Note: This file will always be saved in the MegaCLI root folder)

From: <https://wiki.dewberry.co.za/> - Shaun's Wiki

Permanent link: [https://wiki.dewberry.co.za/doku.php?id=lsi\\_logic\\_symbios\\_megaraid&rev=1575978341](https://wiki.dewberry.co.za/doku.php?id=lsi_logic_symbios_megaraid&rev=1575978341)

Last update: 2019/12/10 11:45

