

## Set alert emails from CLI

```
ipmitool sunoem cli "set /SP/alertmgmt/rules/2 type=email
destination=me@email.com level=critical"
```

## Showing faulted hardware

```
ssh root@ilom - Default password: changeme

# Show faultmgmt info
--> show /SP/faultmgmt

# Show faulty component
--> show faulty

# Show event log with errors
--> show /SP/logs/event/list

# Clear the hardware fault from the logs
--> show /SP/logs/event/ clear=true

# Clear the error.
--> set /SYS/MB/CPU0 clear_fault_action=true

# Show all System properties
--> show -d properties -level all /System

# Show uptime
--> show -d properties /SP/clock uptime
```

## Oracle Firmware Updates

```
fwupdate show all
fwupdate update controller -x metadata.xml -d
fwupdate update disk -x metadata.xml -d
fwupdate update expander -x metadata.xml -d
```

From:  
<https://wiki.dewberry.co.za/> - Shaun's Wiki

Permanent link:  
[https://wiki.dewberry.co.za/doku.php?id=oracle\\_ilom](https://wiki.dewberry.co.za/doku.php?id=oracle_ilom)

Last update: **2020/01/23 08:33**

