

Set alert emails from CLI

```
ipmitool sunoem cli "set /SP/alertmgmt/rules/2 type=email  
destination=me@email.com level=critical"
```

Showing faulted hardware

```
ssh root@ilom - Default password: changeme  
  
# Show faultmgmt info  
--> show /SP/faultmgmt  
  
# Show faulty component  
--> show faulty  
  
# Show event log with errors  
--> show /SP/logs/event/list  
  
# Clear the hardware fault from the logs  
--> show /SP/logs/event/ clear=true  
  
# Clear the error.  
--> set /SYS/MB/CPU0 clear_fault_action=true  
  
# Show all System properties  
--> show -d properties -level all /System  
  
# Show uptime  
--> show -d properties /SP/clock uptime
```

Oracle Firmware Updates

```
fwupdate show all  
fwupdate update controller -x metadata.xml -d  
fwupdate update disk -x metadata.xml -d  
fwupdate update expander -x metadata.xml -d
```

From:
<https://wiki.dewberry.co.za/> - Shaun's Wiki

Permanent link:
https://wiki.dewberry.co.za/doku.php?id=oracle_ilom

Last update: **2020/01/23 08:33**

