

Set alert emails from CLI

```
ipmitool sunoem cli "set /SP/alertmgmt/rules/2 type=email  
destination=me@email.com level=critical"
```

```
ssh root@ilom - Default password: changeme
```

```
# Show faultmgmt info  
--> show /SP/faultmgmt
```

```
# Show faulty component  
--> show faulty
```

```
# Show event log with errors  
--> show /SP/logs/event/list
```

```
# Clear the hardware fault from the logs  
--> show /SP/logs/event/ clear=true
```

```
# Clear the error.  
--> set /SYS/MB/CPU0 clear_fault_action=true
```

From:
<https://wiki.dewberry.co.za/> - **Shaun's Wiki**

Permanent link:
https://wiki.dewberry.co.za/doku.php?id=oracle_ilom&rev=1536745587

Last update: **2019/09/16 16:10**

