

Set alert emails from CLI

```
ipmitool sunoem cli "set /SP/alertmgmt/rules/2 type=email
destination=me@email.com level=critical"
```

Showing faulted hardware

```
ssh root@ilom - Default password: changeme

# Show faultmgmt info
--> show /SP/faultmgmt

# Show faulty component
--> show faulty

# Show event log with errors
--> show /SP/logs/event/list

# Clear the hardware fault from the logs
--> show /SP/logs/event/ clear=true

# Clear the error.
--> set /SYS/MB/CPU0 clear_fault_action=true
```

Oracle Firmware Updates

```
fwupdate show all
fwupdate update controller -x metadata.xml -d
fwupdate update disk -x metadata.xml -d
fwupdate update expander -x metadata.xml -d
```

From:

<https://wiki.dewberry.co.za/> - **Shaun's Wiki**

Permanent link:

https://wiki.dewberry.co.za/doku.php?id=oracle_ilom&rev=1579766418

Last update: **2020/01/23 08:00**

