

## Replacing a disk in predictive failure safely

```
/opt/MegaRAID/storcli/storcli64 /c0/eALL/sALL show all | grep -e 'State :' -  
e "Predictive Failure Count"  
Drive /c0/e8/s24 State :  
Predictive Failure Count = 1  
  
/opt/MegaRAID/storcli/storcli64 /c0 /eall /sall show  
  
/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 start locate  
/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 set offline  
/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 set missing  
/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 spindown  
  
/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 show rebuild  
  
(/opt/MegaRAID/storcli/storcli64 /c0/e8/s24 rebuild)
```

From:  
<https://wiki.dewberry.co.za/> - **Shaun's Wiki**

Permanent link:  
[https://wiki.dewberry.co.za/doku.php?id=qlogic\\_fc\\_adapter&rev=1554807541](https://wiki.dewberry.co.za/doku.php?id=qlogic_fc_adapter&rev=1554807541)

Last update: **2019/09/16 16:09**

